

USER'S MANUAL



Alpha Numeric Pager



T4

Thank you for purchasing the *T4* Pager.
Through its advanced technology, the will *T4*
keep you connected to your important messages,
anytime, anyplace.
Please read this manual carefully to maximize all of its
features and capabilities.

CONTENTS

▶	FEATURES	5
▶	DESCRIPTION OF INDICATORS & SYMBOLS	8
▶	CONTROL BUTTONS	11
▶	OPERATION	12
•	Installing/Replacing the Battery	12
•	Turning the Backlight On/Off	13
•	Turning The Pager On	14
•	Turning The Pager Off	15
•	Main Screen	16
•	Function Menu Screen	17
•	Inbox Folder Screen	18
•	Info Folder Screen	19
•	Saved Folder Screen	19
•	Reading Messages in each Folder	20
•	Scrolling Screen by Screen	20
•	Reading Previous or Next Message	20

CONTENTS

▶	FUNCTION MENU	21
•	Setting the Time and Date	21
•	Setting Alarm	22
•	Setting Private Time	23
•	Setting Message Alert	24
•	Setting Audible ON/OFF	25
•	Enabling the Display Zoom	26
•	Enabling the Reminder Alert	27
•	Low Battery Alert	28
•	Locking and Unlocking Messages	29
•	Deleting A Message	30
•	Deleting All Messages	30
•	Moving A Message to the Saved Folder	31
•	Setting the Info Slot Alert Type	32

FEATURES

- ▶ 16 Flex addresses
- ▶ 6 Line x 20 Alpha Character Display
- ▶ Up to 20 Inbox Messages
- ▶ 15 Info Message Slots
- ▶ Up to 16 Saved Messages
- ▶ Inbox Message Storage: 6400 Characters
- ▶ Info Message Storage: 19200 Characters
- ▶ Saved Message Storage: 3200 Characters
- ▶ Up to 10 Inbox Messages can be Locked to Prevent Deletion
- ▶ Info History of up to 7 messages

FEATURES

- ▶ **Zoom On/Off (User Selectable)**
- ▶ **Battery Status Display**
- ▶ **One Time or Daily Alarm (User Selectable)**
- ▶ **Message with Time & Date Stamp**
- ▶ **Automatic Alert Reset**
- ▶ **One Beep, Seven Alerts (#7 the continuous Alert),
Plus Chirp, Vibe, Vibe and chirp and Silent Options**
- ▶ **Reminder Alert for Unread Messages (User Selectable)**
- ▶ **Menu Option to Turn Device ON/OFF**
- ▶ **New Message Indication (Flashing Icon)**















Caution : The Continuous Alert is designed for Emergency Personnel, alert will continue until answered. Be sure to check battery level, if alert has continuously attempted to notify of message over a long period of time

FEATURES

- ▶ Unread Message Indication
- ▶ Continuous Message Indication (with Icon)
- ▶ Erred Character Indication
- ▶ All or Individual Message Delete
- ▶ Memory Full Indication (with Icon)
- ▶ Message Slot Number
- ▶ Duplicate Message Indication (with Icon)
- ▶ EL Backlight Display
- ▶ Out of Service Range Indication (Optional)
- ▶ Message Retention During Battery Replacement
- ▶ 1 AA Battery
- ▶ Private Time

DESCRIPTION OF INDICATORS & SYMBOLS

Indicators

	Audio Alert		In Range or Out Range Indication
	Vibe Alert		Full Battery Status
	Enabled Alarm		2/3 Battery Status
	Enabled Private Time		1/3 Battery Status
	New Page or Unread Message Indication		Low Battery Status
	Lock Message		Message Continuation
	Unlock Message		Power On

DESCRIPTION OF INDICATORS & SYMBOLS

Symbols



Inbox Folder



Info Folder



Saved Folder



Set Time



Set Alarm



Set Alert



Pager Off



Set Private



Zoom



Enable Reminder



Disable Reminder



Delete All



Delete



Escape



Move to Saved Folder

DESCRIPTION OF INDICATORS & SYMBOLS

Symbols



Info Slot (Enabled Alert)



Unread Info Slot (Enabled Alert)



Set Info Slot Alert



Enable Private Time



Disable Private Time



Saved Message



Unread Inbox Message



Read Inbox Message



Read Info Slot



Unread Info Slot



Message Cursor



Set Audible ON



Set Audible OFF

CONTROL BUTTONS



- Use to navigate through the Function menu and through your messages
- Use to navigate through time, alarm, and date setting functions

 


- Use to enter the Function menu mode
- Use to turn the Backlight off
- Use to exit to current Function mode




- Use to turn the pager on and off
- Use to read the received message
- Use to activate your selection
- Use to adjust the time, alarm, and date setting functions

Installing/Replacing the battery



 Turn your pager off, hold the pager face down, slide the battery door lock away from the door and open the battery compartment by pressing down with your thumb on the battery door and sliding the battery door in the direction indicated by the arrow on the battery door.



- Lift up the battery door to access the battery.
- Remove the old battery by pulling it towards the end of pager.
- Insert a new AA type battery so the orientation matches the polarity shown in the battery compartment.

 
If a new battery is inserted within the 30 seconds of removing the old battery, messages will be retained.

Turning the Backlight ON/OFF

The backlight allows viewing of messages in low light conditions.

- To turn the backlight On, press and hold  for 2 seconds
 - The Backlit will automatically turn off after 10 seconds of no buttons being pressed
 - To immediately turn the backlit Off, press and hold  for 2 seconds
- If the buttons pressed in the dark the backlight is automatically turned on

Turning the Pager On



PowerUp Screen

Press the Read button for two (2) seconds to turn the pager on. A start-up screen is momentarily displayed and the pager alerts the currently selected alert-mode (Vibe, Audio, Silent).



Main Screen

 


Stand by Screen






Turning the Pager Off




Off Screen



 
Time/Date display in Pager Off mode

- Press the  button to display the Function menu
- Press the  or  button to move the cursor on OFF icon
- Press the  button
"TURN PAGER OFF?" is displayed
- Press the  button again to turn the pager off

The pager is now off and the screen should be blank.

Note: If you choose the function key () while the pager is off, the pager will display Pager Off Mode and the time and date. The display disappears in a few seconds or after you press any of the pager keys.

Main Screen



Main Screen

Pressing any of the buttons on the Standby Screen will provide access to the Main Screen.




The Main Screen shows both the current status of message folders (Inbox/Info/Saved) and the time and date.

The Main Screen also displays any activated pager settings on the left hand side.

The numbers to the right of the inbox and info icons indicate the number of unread messages.

When the Main Screen is initially displayed, the Inbox Folder icon is the first icon followed by the Info and Saved icons.

The Inbox Folder is also highlighted. Choosing either arrow button will highlight the other icons.

- Press  or  to move the cursor between Main Screen Folders
- Press  to enter the selected Folder

Function Menu Screen

The Function Menu provides access to the many features incorporated in the T4.



Function Menu Screen

As you navigate through the Function menu, the Function icon will change to indicate the current location of the cursor.

- Press or to navigate through the Function menu
- Press to enter the current function
- Press to exit the Function menu

Note: Depending on the pager and whether it has messages, some icons may not display on the pager.


Inbox Folder



 
Inbox Folder Screen

The Inbox Folder Screen shows information about your Inbox messages.

- Status: Unread, read or locked
- Timestamp: Month/Day
- Preview: First and second line of message

Note: The status of an unread message will not change by previewing the message. You must select the Read button () to open and view the message. Only after the message has been opened will it be marked as "read" on your pager.

Info Folder Screen




Info Folder Screen

The Inbox Folder Screen shows information about your Inbox messages.

- Status: Unread, read or locked
- Timestamp: Month/Day
- Preview: First and second line of message

 Saved Folder Screen






Saved Folder Screen

The Saves Folder Screen shows information about your Inbox messages.

- Timestamp: Month/Day
- Preview: First and second line of message

FUNCTION MENU

Reading Messages in each Folder


- Press  or  to move the cursor to the message you want to read
- Press  button to read the message

Scrolling Screen by Screen

- Press and hold  button

 
Reading Previous or Next Message

- When reading a message, Press  or  button to read the Previous or Next message

Note: If the reminder alert is enabled, the pager will give a periodic alert until all unread messages are read. A flashing  symbol on the Stand by screen indicates that there are unread messages on your pager.







FUNCTION MENU

Setting the Time and Date



 
Set Time Screen

To set the Time and Date, perform the following steps.
From the Function Menu:

- Press  or  to move the cursor to display **"SET TIME"**
- Press  to display the Set Time Screen
- Press  to move the cursor to the next digit
- Press  to adjust the current digit
- Repeat the two previous steps to adjust all time digits
- Press  to activate the current setting and exit to the Main Screen









FUNCTION MENU

Setting Alarm

 


Set Alarm Screen

To set an alarm, perform the following steps.
From the function Menu:

- Press  or  to move the cursor to display "**SET ALARM**"
- Press  to display the Set Alarm screen
- Press  to select the desired alarm type (Off, 1 time, Daily)
- Press  or  to move the cursor to the time adjust field
- Press  to adjust the current digit
- Repeat the two previous steps to adjust all the time digits
- Press  button to activate the current setting and exit to the Main Screen

Setting Private Time










Set Private Time Screen

-  : Enable Icon
-  : Disable Icon

Private Time allows you to specify a time period during which the device receives message without our an audible or vibrate alert.

To Set Private Time, perform the following steps.

From the Function Menu:

- Press  or  to move the cursor to display **"SET PRIVATE"**
- Press  to display the Set Private screen
- Press  or  to move the cursor
- Press  to adjust the current digit or to enable/ disable private time
- Repeat the two previous steps to adjust all the time digits
- After setting the ON time, repeat the previous steps to set the OFF time
- Press  button to activate the current setting and exit to the Main Screen

Note: While Private Time is active, the Reminder alert and Low Battery alert will not sound.

FUNCTION MENU

Setting Message Alert



Set Message Alert Screen

You can set the following message alerts:

- Audible
- Chirp
- Vibe and Chirp
- Vibe
- Silent

In addition, you may select from 7 Pleasing Alerts.

The #7 Pleasing Alert is the Continuous Alert, which alerts until the message is read. To change the Message Alert, perform the following steps.




- Press or to move the cursor to display "SET ALERT"
- Press to display the Set Alert screen
- Press or to move the cursor to the alert you want to set
- Press to activate the alert setting and exit to the Main Screen


If the Personal alert type is silent all Info service page alerting is silent regardless of current setting.


Note: You may also press to exit to the Main Screen without changing the Message Alert.

Setting Audible ON/OFF

If the device alerting is audible it can be quickly toggled to vibrate.
From the Function menu:

- Press  or  to move the cursor to display "SET AUDIBLE ON/OFF"
- Press  to toggle the Audible Setting

If the Audible On function is set (), the pager will alert.

If the Audible Off function is set (), the pager will be on vibrate mode. Audible Mode applies to all alerts, including reminder alert, alarm, etc.

Although the pager is audible off, alarm is audible only.

Note: If the Inbox alert has been set for Silent or Vibrate, setting the Audible ON/OFF Function will not change alerting behavior.

Setting Display Zoom









Zoom Setting Screen

When this feature is enabled, the standard 6-line Display can be changed to a 3-line Display.




The characters are enlarged to increase message readability. To Set the Display Zoom, perform the following steps.

From the Function Menu:

- Press  or  to move the cursor to display "ZOOM"
- Press  to display the Zoom screen
- Press  or  to select the Zoom mode desired
- Press  to activate the Zoom and exit to the Main Screen

 
Enabling Reminder Alert

When this feature is enabled and there are unread Inbox messages, the pager will alert the user with the current selected Inbox alert. The pager does not emit reminder alerts for Info Messages, or messages with no alert setting. To change the Reminder Alert Setting, perform the following steps. From the Function menu:

- Press  or  to move the cursor to display **"ENABLE/DISABLE REMINDER"**
- Press  to toggle the current setting and exit to the Main Screen

FUNCTION MENU

Low Battery Alert









When the Battery capacity falls below the operational level, a Low Battery indication message will be displayed and an alert chirp will sound every hour.

Locking and Unlocking Messages

Up to 10 messages can be locked to prevent them from being deleted or from being replaced when the memory is full. To Lock or Unlock a message, perform the following steps.

From the Inbox Folder Status Screen:

- Press  or  to select the message you want to lock or unlock
- Press  and then press  or  to move the cursor to show *"LOCK"* or *"UNLOCK"*
- Press  to activate the setting







To lock or unlock a message while reading it, follow the last two steps above while the message is displayed.

Note: Info and Saved Messages cannot be locked.

Deleting A Message

To delete a single message perform the following steps.





From the Inbox/Info/Saved Folder Status Screen:

- Press  or  to select the message you want to delete
- Press  and then press  or  to move the cursor to show **"DELETE"**
- Press  to delete the message

Deleting All Messages

To Delete all messages, perform the following steps.







From the Inbox/Info/Saved Folder Status Screen:

- Press  and then press  or  to move the cursor to show **"DELETE ALL"**
- Press  to delete all messages

Note: Unread personal messages and Locked messages cannot be deleted by using the Delete All function. Using Delete All with the Info Folder, will only delete those messages in the current selected slot.

Moving A Message to the Saved Folder

To move a message to the Saved Folder, perform the following steps.
From the Inbox/Info Folder Screen:

- Press  or  to select the message you want to move
- Press  and then press  or  to move the cursor to show **"NOTEBOOK"**
- Press  to move the message

To Move a message while reading it, follow the last two steps above while the message is displayed.










Note: The term **"NOTEBOOK"** refers to the Saved Folder.

Setting the Info Slot Message Alert Type

A different alert can be set for each Info Slot.

To set the Info Slot Alert, perform the following steps.

From the Info Folder status Screen:

- Press  or  to select the Info Slot you want to set the alert for
- Press  and then Press  or  to move the cursor to show "**SET ALERT**"
- Press  and then Press  or  to move the cursor to the desired alert type
- Press  to activate the alert setting

While reading a message, follow the last three steps.

Note: When Inbox Message alert is set to Vibe , all alerts revert to Silent regardless of the current Info Slot alert type.

LIMITATION OF LIABILITY:

Neither your Wireless Provider nor Sun Telecom International is responsible for data that may be damaged or lost at any time, including, without limitation data lost or damaged during the servicing of Sun Telecom International hardware. In as much as the wireless data service provided, we cannot guarantee or warrant that the wireless data service will always be available or will always function properly. For this and other reasons, the wireless data service should not be relied upon for the transmission of data relating to emergency or life-threatening or mission critical situations, and Sun Telecom International disclaims any liability on its behalf and on behalf of its Wireless Providers for events or damages resulting from such reliance or the failure of the wireless data service to perform or to be available for your use of the wireless data service, including, without limitation, the lack of service coverage in the area in which YOU wish to use the wireless solution. To the extent the third party providing the wireless data service provides any warranties or guarantees that may be passed on to YOU, such warranties and/or guarantees are automatically passed on to YOU without any further effort on your part or on the part of Sun Telecom International. Neither Sun Telecom International nor your wireless provider shall in any way be liable to you for any damages you suffer or incur (including, but not limited to, general, special, consequential or incidental damages including damages for loss of business profits, business interruption, loss of business information and the like and personal injury or wrongful death damages) arising from or in connection with the use or performance of our product, even if Sun Telecom International or your wireless solution provider are aware of the possibility of such damages. This limitation is intended to apply and does apply without regard to whether such damages are claimed, asserted or brought in an action or claim sounding in tort or contract, or on the warranty, or under any other law or form of action.

INFORMATION TO USER:

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception (which can be determined by turning the equipment off and on), the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient/Relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



FCC COMPLIANCE STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution : Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate this equipment.

The party responsible for product compliance

