

USER'S MANUAL

ST800™



Numeric Pager

SUN TELECOM
INTERNATIONAL

ST800™

Congratulations on your purchase of our *ST800* Pager. By incorporating some of the most advanced electronic paging technologies, the *ST800* is reliable and easy to use. Best of all, the *ST800* is affordable and will keep you in touch with those important to you.

Please carefully read this manual before using your *ST800* Pager in order to fully understand the pager's functions and capabilities. Once again, congratulations on your purchase.

CONTENTS

 
FEATURES	4
BUTTONS	5
ICONS AND DESCRIPTIONS	6
TURNING THE PAGER ON	7
TURNING THE PAGER OFF	8
RECEIVING AND READING MESSAGES	9
READING LOCKED MESSAGES	10
DUPLICATE MESSAGES	11
CHANGING THE ALERT STATUS	12
MEMORY CAPACITY & LOW BATTERY INDICATOR	13
LOCKING MESSAGES	14
DELETING INDIVIDUAL MESSAGES	15
DELETING ALL MESSAGES	16
SETTING THE ALARM	17
SETTING THE DATE AND TIME	18
AUTOMATIC ON / OFF	19
LIGHT AND BATTERY INFORMATION	20
CANNED MESSAGES	21
REMINDER ALERT	22

FEATURES*

- ▶ 16 Message Memory Capability
- ▶ 9 Locked Messages
- ▶ 8 Different Melodies
- ▶ 5 Different Beeps
- ▶ Vibrator
- ▶ Time Stamp
- ▶ Time/Date
- ▶ Alarm
- ▶ Automatic On/Off
- ▶ Back Lighting
- ▶ Deletion of All or Individual Messages
- ▶ In Range Indicator
- ▶ Low Battery Indicator
- ▶ Duplicate Message Indicator
- ▶ Unread Message Indicator
- ▶ Memory Full Indicator
- ▶ Reminder Alert

*Specifications are subject to change without prior notice

BUTTONS

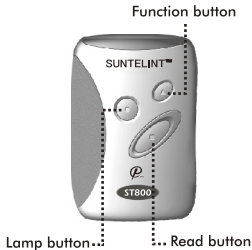

FUNCTION BUTTON
Use to Enter the Menu Mode
Use to Turn the Pager On


LAMP BUTTON
Use to Exit the Menu Mode
Use to Turn Light On and Off


READ BUTTON
Use to Read Messages
Use to Select Settings and Features

ICONS AND DESCRIPTIONS

 : Reception Area

 : Alert (Beep) On

 : Alert (Melody) On

 : Alert (Vibrator) On

 : Alarm On

 : Auto Pager Off

 : Message Lock

 : Duplicate Message

OFF : Pager Off

 : Change Battery

FULL : Message Full

 : Message Longer than 12 Characters

TURNING THE PAGER ON*



< Stand by Mode >

To Turn the Pager On

Press the Function Button (pg.5) for at least two (2) seconds or longer while the pager is in the OFF mode. The Time and Date should appear on the bottom of the pager screen.

*After inserting a battery, the pager will briefly vibrate and beep to indicate that it has entered the normal reception mode.

TURNING THE PAGER OFF

A screenshot of a pager's LCD screen. In the top left corner, there is a small icon of a bell with a left-pointing arrow. The main text on the screen reads "POWER OFF ?".


A screenshot of a pager's LCD screen. In the top left corner, there is a small icon of a bell with a left-pointing arrow. The main text on the screen is split into three parts: "12:00A" on the left, "OFF" in the middle, and "1-1" on the right.

To Turn the Pager Off

Press the Function Button (pg.5) for at least two (2) seconds to access the Function Menu. The pager will beep once and "Set Alert?" should appear on the screen. "Set Alert?" should appear on the screen.

Press the Function Button once more and "Power Off?" should appear on the screen. Press the Read Button (pg.5) to turn the pager OFF. " **OFF** " should appear on the pager in the upper right hand corner of the screen.

 RECEIVING AND READING MESSAGES



Receiving & Reading Messages

When you receive a message, the selected alert will sound off. Select the Read Button (pg.5) to stop the alert and to read the message(s). The following information will appear: Message Number, Time Stamp and the Message. The message order will be from newest to oldest.

Reading Messages with 13 Characters or More

Messages with 13 or more characters will appear together with a ► symbol on the upper right hand corner of the screen. Press the Read Button to read the message in it's entirety.

READING LOCKED MESSAGES

 


Reading Locked Messages

In order to read a locked message (s), there must be no unread messages.

Press the Function Button (pg.5) to enter into the Locked Message Read Mode. Press the Read Button to display and read all locked messages.

DUPLICATE MESSAGES



Duplicate Messages

The duplicate message indicator will appear on the pager screen when the pager receives a message that is *identical* to a message already in the pager's memory.

CHANGING THE ALERT STATUS

▼◀
SET ALERT ?

▼ ≈
VIBRATOR

▼◀
BEEP 1

▼ 🎵
MELODY 1

To Change the Alert Status

Press the Function Button (pg.5) for at least two (2) seconds or longer to access the Function Menu. The pager will beep once and "Set Alert?" will appear on the pager screen.

Press the Read Button to select the set alert mode. To scroll through the alert options, press the Function Button. The alerts will appear in the following order: Vibrator, 5 Beeps and 8 Melodies.

Press the Read Button to make a selection while the desired alert is displayed on the pager screen.

MEMORY CAPACITY & LOW BATTERY INDICATOR

Memory Capacity

 
 
The *ST800* has the capacity to hold sixteen (16) numeric messages.

Low Battery Indicator

When the battery capacity falls below the operational level, the low battery icon will appear and the voltage alarm tone will be activated.



LOCKING MESSAGES



To Lock a Message

Select a message to be locked and then press the Function Button (pg.5). When "**Lock?**" appears on the pager screen, press the Read Button. This will lock the message and the screen will display "**Locked**".

A maximum of nine (9) messages can be locked at one time.

DELETING INDIVIDUAL MESSAGES



To Delete an Individual Message

To delete unlocked message, press the Function Button (pg.5) twice (2x) while the message is displayed. When the "Delete?" message appears on the pager screen, press the Read Button to delete.

To delete a locked message, press the Function Button while the message is displayed. When the "Delete?" message appears on the pager screen, press the Read Button to delete. "Deleted" will appear on the pager screen once the message has been deleted.

DELETING ALL MESSAGES

▽◀
DELETE ALL ?

▽◀
GENERAL ?

▽◀
REALLY ?

▽◀
LOCKED ?

To Delete all Messages

To delete all unlocked messages, press the Function Button for at least two (2) seconds to access the Function Menu. Forward to "**Delete All?**" by pressing the Function Button. Press the Read Button after "**Delete All?**" appears on the screen. "**General?**" will appear, at which time you should press the Read Button to display "**Really?**" Confirm the deletion by pressing the Read Button again.

To delete all locked messages, press the Function Button for at least two (2) seconds to access the Function Menu. Forward to "**Delete All?**" by pressing the Function Button. Press the Function Button while "**Delete All?**" is displayed. Press the Read Button to display "**Really?**" Confirm the deletion by pressing the Read Button again.

SETTING THE ALARM



SET ALARM ?



ALARM ON ?



ALA 12:00A

To Set the Alarm

Press the Function Button (pg.5) for at least two (2) seconds to access the Function Menu. Forward to "Set Alarm?" by pressing the Function Button. Press the Read Button to select the Alarm Mode.

Press the Function Button to toggle between Alarm On and OFF. Press the Read Button while "Alarm On?" is displayed with the time blinking.

Press the Function Button to change the hour. To move to the next field, press the Read Button. Press the Function Button to change the minutes.

SETTING THE DATE AND TIME



SET TIME ?

To Set the Date and Time

Press the Function Button (pg.5) for at least two (2) seconds to access the Function Menu. Forward to "**Set Date?**" by pressing the function Button. Press the Read Button to select the Set Time Mode.

Press the Function Button to change the month. To move to the next field, press the Read Button. Follow the same procedure to set the Time.

AUTOMATIC ON/OFF*

▼40
SET AUTO ?

▼40
AUTO ON ?

▼40
ON 05:00A

▼40
AUTO OFF ?

To Enable Automatic On

To enable the Automatic On, press the Function Button for at least two (2) seconds to access the Function Menu. Forward to "Auto On/Off?" by pressing on the Function Button. Press and release the Function Button until "Auto On?" appears then press the Read Button. Press the Function Button to adjust the hour, using the Read Button to proceed through the fields. Repeat the previous step to adjust the On and Off time setting. Press the Read Button to activate your selection.

To Disable Automatic On

From the "Auto On/Off?" screen, press and release the Function Button until "Auto Off?" appears. Press the Read Button to activate your selection.

*Factory Default is 1:00 a.m.- 5:00 a.m.

LIGHT AND BATTERY INFORMATION

To Turn on the Light

Press the lamp button to activate the light.

Battery Information

The *ST800* is designed to operate with a AAA size alkaline battery. ***Do Not Use Carbon Zing Batteries.***

 
CANNED MESSAGES

Canned Messages


The *ST800* pager comes with seven (5) pre-programmed messages which are displayed on the pager when the corresponding code is entered.

To Send a Canned Message

Dial the pager number on a telephone and wait for a beep sound. Enter the corresponding code for the desired message.



 Following is the list of preprogrammed canned message.



CODE	Displayed Message
1	Honey
2	Friend
3	Love you
4	Home
5	Office

REMINDER ALERT

When an unread message exists, the pager gives a periodic reminder alert (every 3 minutes) until all unread messages are read.

LIMITATION OF LIABILITY:

Neither your Wireless Provider nor Sun Telecom International is responsible for data that may be damaged or lost at any time, including, without limitation data lost or damaged during the servicing of Sun Telecom International hardware. In as much as the wireless data service provided, we cannot guarantee or warrant that the wireless data service will always be available or will always function properly. For this and other reasons, the wireless data service should not be relied upon for the transmission of data relating to emergency or life-threatening or mission critical situations, and Sun Telecom International disclaims any liability on its behalf and on behalf of its Wireless Providers for events or damages resulting from such reliance or the failure of the wireless data service to perform or to be available for your use of the wireless data service, including, without limitation, the lack of service coverage in the area in which YOU wish to use the wireless solution. To the extent the third party providing the wireless data service provides any warranties or guarantees that may be passed on to YOU, such warranties and/or guarantees are automatically passed on to YOU without any further effort on your part or on the part of Sun Telecom International. Neither Sun Telecom International nor your wireless provider shall in any way be liable to you for any damages you suffer or incur (including, but not limited to, general, special, consequential or incidental damages including damages for loss of business profits, business interruption, loss of business information and the like and personal injury or wrongful death damages) arising from or in connection with the use or performance of our product, even if Sun Telecom International or your wireless solution provider are aware of the possibility of such damages. This limitation is intended to apply and does apply without regard to whether such damages are claimed, asserted or brought in an action or claim sounding in tort or contract, or on the warranty, or under any other law or form of action.

FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution : Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate this equipment.

The party responsible for product compliance

SUN TELECOM
INTERNATIONAL

11351 Decimal Dr. Louisville, KY 40299